




VAYA

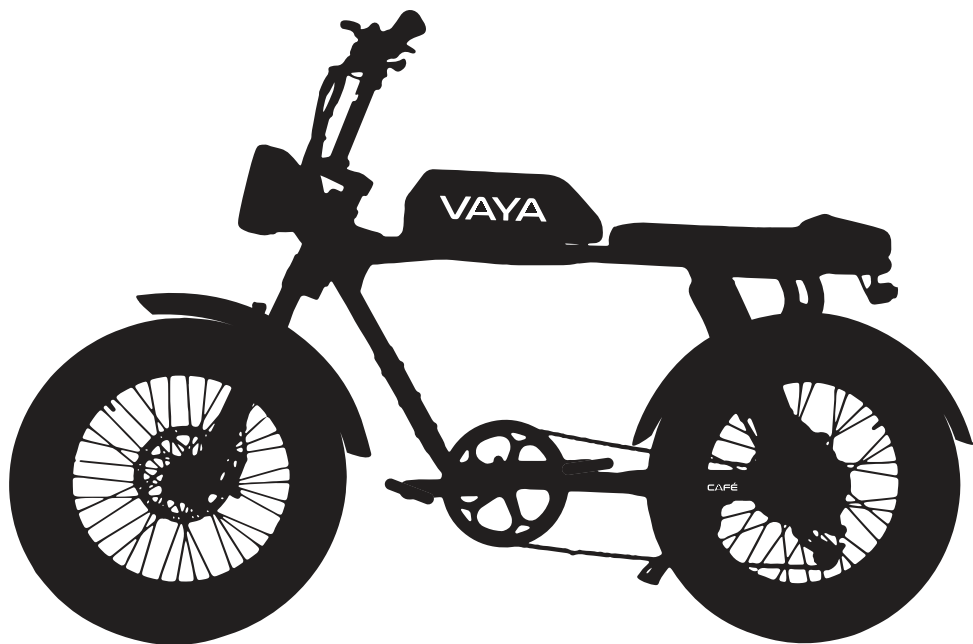

CAFÉ E-BIKE

USER GUIDE
PO-1697

CONTENTS

GENERAL	4
SYMBOL EXPLANATION.....	4
BEFORE YOU START	4
WARNING	5
IMPORTANT SAFETY INSTRUCTIONS.....	5
WARNING - DANGER.....	5
WARNING.....	5
CAUTION	5
NOTE.....	6
WARNING.....	6
BOX CONTENT	6
ASSEMBLY	7
FRONT WHEEL ASSEMBLY.....	7
HANDLEBAR ASSEMBLY	8
SECOND FRONT LIGHT	8
LCD DISPLAY	9
PEDAL ASSEMBLY.....	9
OPERATING PRINCIPLES	10
SETTINGS	10
MAIN MENU.....	10
DISPLAY SETTINGS	10
ADVANCED SETTINGS	11
PASSWORD.....	11
GEAR SHIFTER.....	12
DRIVING MODES	12
PEDAL-ASSIST MODE.....	12
PEDAL MODE.....	12
WALK-ASSIST MODE.....	12
BIKES WITH HAND THROTTLE.....	12
USING THE E-BIKE.....	12
HAND BRAKES.....	12
PRECAUTIONS BEFORE DRIVING.....	12
WEIGHT AND SPEED LIMITS.....	12
WEIGHT RESTRICTIONS	13
OPERATING RANGE.....	13
BATTERY INFORMATION AND SPECIFICATIONS	13
LOCK/UNLOCK BATTERY	13
BATTERY SPECIFICATIONS	14
BATTERY STORAGE	14
CHARGING THE BATTERY.....	14
SAFETY TIPS FOR CHARGING	15
CHARGER SPECIFICATIONS.....	15
INSPECTION, MAINTENANCE, AND STORAGE.....	15
INSPECTING YOUR E-BIKE.....	15
CLEANING YOUR E-BIKE	16
CHAIN MAINTENANCE	16
STORING YOUR E-BIKE.....	16
ADJUSTING THE REAR DERAILLEUR	17
MECHANICAL BRAKES	18
FINE-TUNING THE BRAKE CABLE TENSION	19
NOISE FROM BRAKES	19
THE BRAKES ARE NOT WORKING	19
REMOVING A WHEEL.....	20
CHANGING AN INNER TUBE.....	20
REPLACING THE BRAKE PADS	20
E-BIKE SPECIFICATIONS	21
RECOMMENDED TORQUES	21
DISPLAY ERROR MESSAGE.....	22
DISPOSAL	22

GENERAL

READ CAREFULLY BEFORE USE.

SYMBOL EXPLANATION

The A-weight emission sound pressure level at the driver's ears is less than 70 dB(A)



For indoor use only



This unit is double insulated



Wear personal protective equipment



Read manual before operating the product



Class III protection against electric shock.



The center (tip) of the output plug is positive (+) and the barrel of the output plug is negative (-).



For safe and proper use, follow these instructions.
Keep this user manual for future reference.

BEFORE YOU START

Before you use the e-bike for the first time, please read the USER MANUAL thoroughly and follow the instructions and warnings to ensure your safety and the safety of others. It is recommended to keep the instruction manual for future reference.

For further information, visit www.vayabike.com

WARNING

Failure to follow the basic instructions and safety precautions listed in the USER MANUAL can lead to damage to your scooter, other property damage, serious personal injuries, and even death.

The e-bike is designed for “city and trekking”, so use the bike only on roads and even pathways. Using the bike on other surfaces or in other ways can result in system failure and loss of control, leading to serious personal injuries or death. As with all mechanical components, the bike is subject to normal wear and tear. Different materials and components can behave differently due to wear and tear. If components’ lifetime is exceeded, they can suddenly fail or break, resulting in injuries to the user. Any form of crack, scratch or change in colour of components is a sign that the component is worn out and is in need of replacement.

IMPORTANT SAFETY INSTRUCTIONS

Warning - Danger

1. Children should be supervised to ensure that they do not play with the appliance. Cleaning and user maintenance should not be done by children.
2. The battery charger may be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge provided that they have been given supervision or instruction regarding the use of the appliance in a safe way and provided they understand the hazards involved.
3. Do not attempt to modify, change or open your battery.
4. Do not place the battery near any heat sources such as heaters. The battery must not be heated or exposed to open flames.
5. Do not subject the battery to heavy impact or throw it.
6. Do not submerge the battery in water or let the battery connector become wet.
7. Do not insert the battery if the battery connector on the e-bike is wet. Place the e-bike inside and make sure that the connector on the e-bike is completely dry before inserting the battery.
8. Do not leave the battery in direct sunlight. Do not leave the battery in a vehicle during high temperatures or in other warm locations. This can cause battery leakage.
9. Only use the charger included in the box. The e-bike must only be supplied with safety extra low voltage corresponding to the marking on the e-bike’s battery.
10. Do not exceed the maximum weight limit (150 kg).

Warning

1. Do not charge the battery outside or in areas with high humidity.
2. Do not use the battery if it is visibly damaged.
3. Ensure that the wheels are mounted correctly before riding the bike.
4. Learn how to ride and use all functions of the e-bike before using it in traffic.
5. Check that the front light works before riding the e-bike in darkness.
6. Always remove the battery before performing any maintenance or installation work on the e-bike.
7. If the charger supply cord is damaged, it must be scrapped, and the charger must be replaced by the manufacturer or its service agent – please contact the service line.
8. The included charger is only to be used for this e-bike and not for any other electronic equipment. Do not use the charger to charge any non-rechargeable batteries.
9. Do not abuse your e-bike; doing so can damage your unit and cause failure to the operating system which can lead to injuries.
10. Do not ride the e-bike using loose or torn clothing.
11. Safety-critical components should be replaced using genuine replacement parts.
12. Please be aware of the specific risk of entrapment during normal use and maintenance on the front/rear wheel, chain and sprocket.

Caution

1. Please wear all appropriate safety and protective gear while operating the e-bike. See the operating principles section for more information.
2. Do not operate the e-bike while under the influence of drugs and/or alcohol.
3. Brakes can get hot after use: do not touch them after braking.

4. If the handlebar grips become damaged and expose the metal ends of the handlebar, these must be capped using internally fitted “bar end plugs”.
5. Do not ride in extreme weather, such as heavy snow, rain, hail, sleet, on icy surfaces or in extreme heat.
6. The fording depth should not exceed 80 mm.
7. Do not immerse this bike in water.
8. Do not ride this bike up and down steps.
9. Do not operate the e-bike while talking, texting, or looking at your phone.
10. At high speeds, always take into consideration longer stopping distances.
11. Please note possible increased braking distance in wet weather.
12. Do not clean your bike with a pressure washer. High-pressure cleaning may remove lubricant and/or grease from bike parts.
13. When lubricating the moving parts of the e-bike, take care not to get any lubricant on the brake discs or brake pads.

Note


1. Disassembling the e-bike will void your warranty.
2. PAY ATTENTION – look where you are riding and be aware of the surface conditions, people, places, property, and objects around you.
3. When operating the e-bike in the dark, be sure to follow the laws regarding rear and front lights and correct reflectors. Supplied light is for additional lighting only.
4. Do not ride the e-bike where it is not permitted. Check the limitations of use according to road safety regulations.
5. These instructions are available from the service address at the bottom of the page.

The instructions must be read and understood by each rider before use. Retain them for future reference and pass them on to any new owner or rider of the e-bike. It is recommended to keep the original box in the unlikely event that you need to return the product to us or send it in for repair.


Warning

The warranty does not cover improper use of the product or the failure of users to follow the warnings and operating instructions in this user manual. There is a limited warranty on wearable parts, such as tyres, battery, motor, chain, cassette, brakes, and handle grips. These parts as considered wear parts and can be ordered at www.vayabike.com. See the service folder for more information.


BOX CONTENT

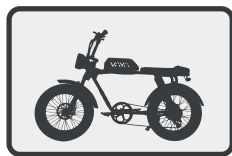


E-bike

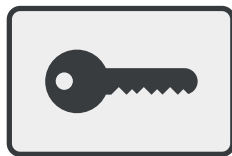


2 x keys

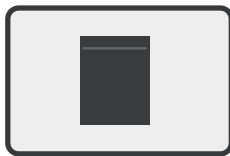


Bag with tools

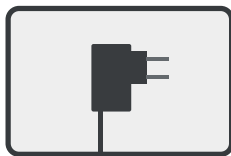

Charger

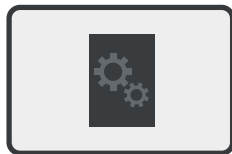

Manual

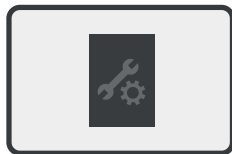

Service folder


ASSEMBLY

WARNING: Read the manual before using the bike for the first time.
See the section “Recommended torques” for correct tightening of bolts and screws.

Front wheel assembly

Remove the protective pre-installed wheel hub by removing the two bolts on each side.

Remove any protection part that is placed between the two brake pads.

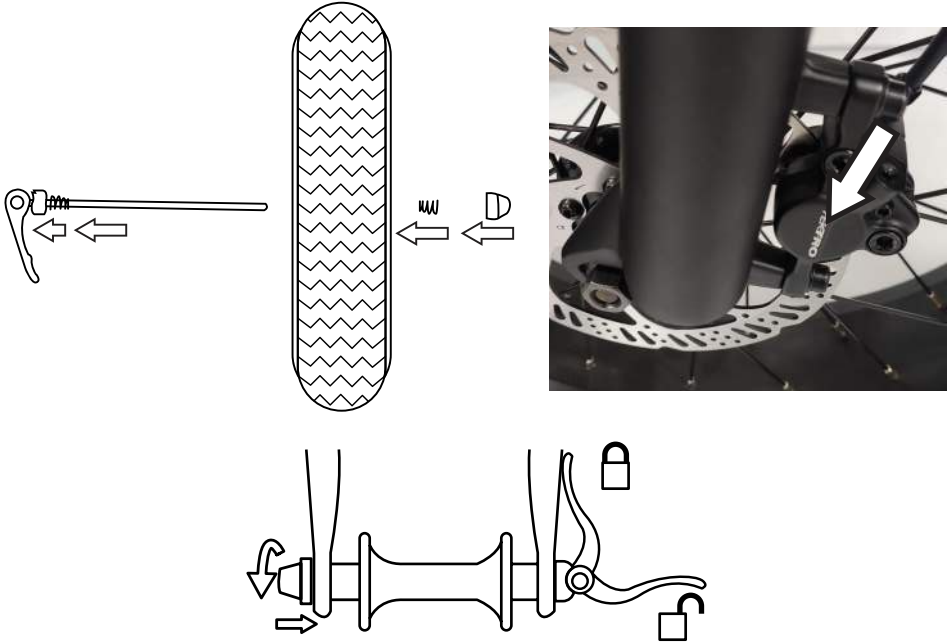

Insert the front wheel into the front fork. Check that the brake disc is placed correctly into the brake calliper.

Do not press the brake levers after the wheel is installed.

Tighten the pre-installed bolts on the wheel. See the section “Recommended torques” for correct tightening of bolts.

Remember to also check the rear wheel, and that all other bolts are secured properly before using the bike for the first time.


Do not use the bike if there is something that is not working correctly during assembly.
Contact after-sales support.

WARNING: Be sure that the wheel is correctly assembled. A loose wheel can lead to injuries or death.

Handlebar assembly


Use the 4 included screws to mount the handlebar. Adjust the handlebar angle to optimal angle before fully tightening the 4 screws. Check that the screws are securely mounted. See the section “Recommended torques” for correct tightening of the screws.

WARNING: Secure the handlebar screws correctly before using the bike for the first time.

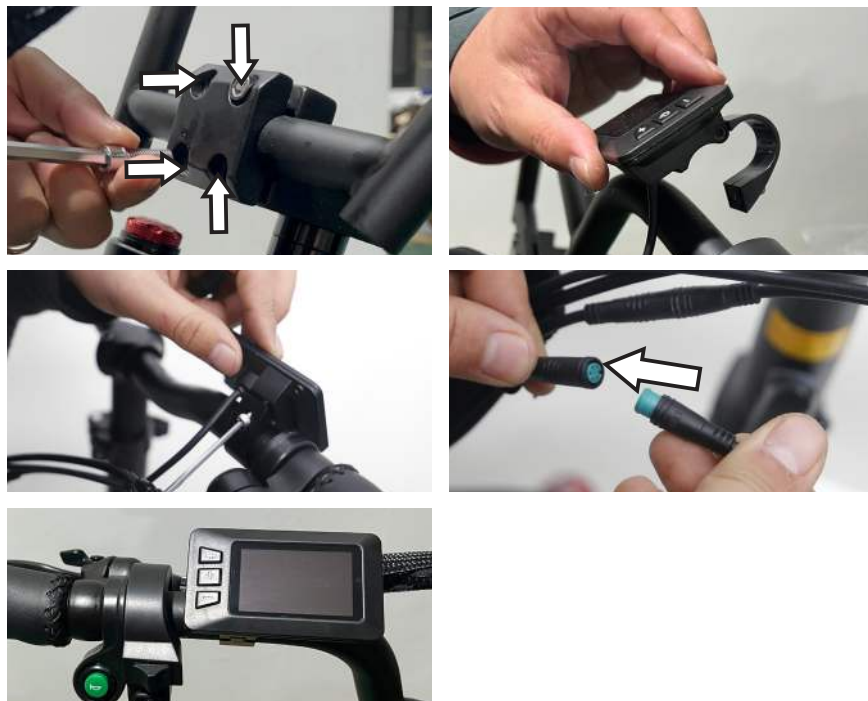

Second front light

There is a second front light included with the bike. The connection cable is hidden inside the cable management zip bag. To use the built-in horn on the bike the second front light must be mounted on the bike.

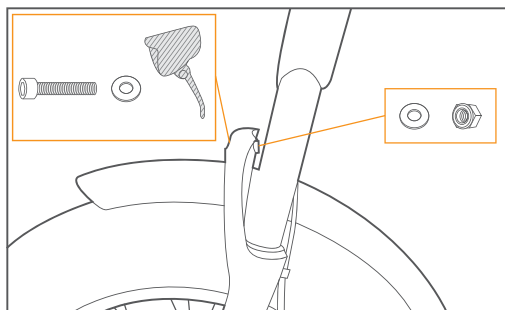


Pedal assembly

Each pedal is marked with an “L” for the left pedal and “R” for the right pedal. The illustration to the right shows where the pedals should be mounted.



**Install the left pedal by turning counter-clockwise.
Install the right pedal by turning it clockwise.**

To secure the pedals, you need to use a wrench on the pedals. See the section “Recommended torques” for correct tightening of the pedals.

Note: If the pedals do not easily turn during installation, they must be removed again. Do not try to install them by force as this can damage the threads.

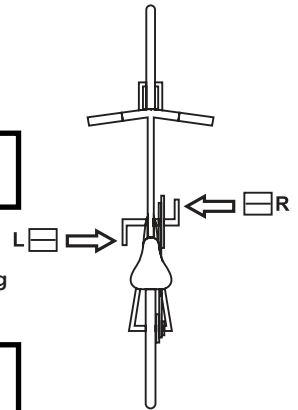

WARNING: Tighten the pedals properly before using the bike for the first time.

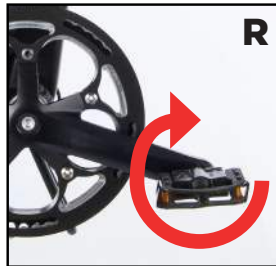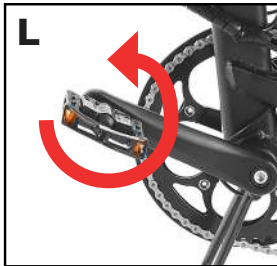

LCD DISPLAY



1. BATTERY INDICATOR

Shows how much battery capacity is left. Remember to charge the battery when it is low on power. The motor will slowly begin to feel weaker as the battery power indicator goes down.

2. MULTIFUNCTION DISPLAY AREA

Shows different settings. Refer to section OPERATING PRINCIPLES for further information.

3. SPEED

Shows the current speed.

4. PADDLE ASSIST SYSTEM (PAS)

Shows the PAS gear.

5. MOTOR POWER INDICATOR






Shows the current motor power output.

6. USB CONNECTION ICON

If the icon is displayed then the display is connected to a USB device.

7. LIGHT INDICATOR.

OPERATING PRINCIPLES

- Press and hold the ON/OFF button to power the e-bike on or off.
- Short press the + button to increase the pedal assist gear.
- Short press the - button to decrease the pedal assist gear.
- Press and hold the  button for 2 seconds to turn on/off the front and rear lights. If the  icon is displayed, the lights are turned on.
- Press the  button to switch between high beam and low beam on front light.
- Press and hold the - button to activate the walk assist. It will start after 2 seconds. As soon as you release the - button the walk assistance is turned off. The  icon is displayed when walk-assist mode is activated.
- Short pressing the ON / OFF button will show different display settings:
 - **ODO:** Total accumulated mileage riding the e-bike.
 - **MAX. SPEED:** Maximum achieved speed.
 - **AVG. Speed:** Average speed while using the bike.
 - **Time:** Shows how long the e-bike has been turned on.
- Trip is always shown on the display:
 - **TRIP:** Distance driven since powering on the e-bike.
- If not used for 10 minutes, the bike will automatically power off.
- If an error occurs on the electrical system, the  icon with an error code is displayed. See the section "Display error description" for more information.

SETTINGS

Simultaneously press and hold the + and - buttons for 2 seconds to enter the display settings. Press the ON / OFF button to enter/confirm settings. Press the + / - buttons to switch between settings or to change settings.

Press and hold the ON / OFF button for about 1 second to save the selected setting and exit the settings menu.

If not used for 1 minute, the display will automatically exit the settings menu.

Main menu

Here you select Display settings and advanced settings.

Display settings

- Trip Reset: Select YES to reset the trip value; select No to cancel.
- Toggle Unit: Select between Imperial (mil) and Metric (km).
- Wheel: Set the wheel size in inches.
- LCD Luminance: Set display background brightness level. 0 - 100 %
- SOC View: Set battery indicator on display. Select between showing battery indicator in percentages or in volts.
- Factory Restore: set to yes to reset to default settings.
- Password: Here a password can be created. When activated, the password must be entered every time the bike is powered on. See the section "Password".
- BACK: Return to the main menu.

Advanced settings

- Power set: Set the range of PAS gears to choose from when using the bike and speed for each gear.
- Set Voltage: Standard volt setting. Check the battery voltage indicator before changing this setting.
- Current Limit: Set the current limit. Low for less motor output. This will reduce battery usage and increase the driving range. Increasing the current limit will give more power to the motor but will deplete the battery faster.
- Speed Limit: Set the max motor speed.
- Assistant Num: Set the number of magnets in sensor disc.
- Speed Sensor: Set the number of magnets in motor.
- Sensitivity: Number of magnets in the magnet disc (located at the crank) that need to be passed by the sensor before the motor is activated. At a lower setting, the motor will activate faster.

WARNING: Be aware that if set low, the crank only needs to be turned slightly to activate the motor. The bike is very heavy, and it can result in a dangerous situation if the motor is accidentally activated.

- Throttle speed: Set throttle speed.
- BACK: return to the main menu.

Password

Setting up the password

Select Password in the menu to set up/change password.



Select Start PassWord and set it to YES to activate the password and set up a password. Input a new password. Press the + / - button to change the value, and then press the i button to confirm input.

To remove the password, select Start PassWord and set it to OFF. Input the current password to confirm the selection.


Select Reset Password to set a new password.

- Input the current password.
- Input a new password.
- Repeat the new password to confirm.

Note: If you set a password write it down. The display cannot be unlocked without the correct password.

Gear shifter

1. Change down
2. Change up

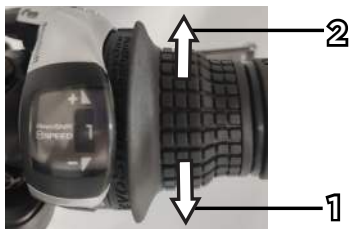

DRIVING MODES

The e-bike has three driving modes: pedal-assist mode, pedal mode, and walk-assist mode.

Pedal-assist mode

Step on one of the two pedals in any PAS gear, and the motor will start according to your setting to provide you with power output. Once you stop pedalling, the pedal assist will stop automatically.

Pedal mode

Power on the bike and set the PAS gear to 0. The bike will now function as normal but still display information. The bike can also be used with the display powered off.

Walk-assist mode

The bike will drive at a speed of 6 km/h. This mode can be used to push the bike up a steep hill or to drive slowly without pedalling.

BIKES WITH HAND THROTTLE

The hand throttle can be used to drive up to 6 km/h.

USING THE E-BIKE

Before using the e-bike, you should be aware of several dangers. Please read the following section carefully if you are a beginner or riding the e-bike for the first time.

Hand brakes

The right hand brake is for braking the rear wheel.

The left hand brake is for braking the front wheel.

Precautions before driving

Check that the components of the e-bike are firmly installed and not damaged.

Check that the brakes work correctly.

Check that the tyres are in good condition and inflated.

Check that the handlebar is securely fastened. If there are loose parts, please tighten them.

WARNING: Perform a brake check every time before using the bike. Incorrectly installed, worn, damaged, or dirty brakes can greatly affect the brake distance and result in serious personal injuries and even death.

WEIGHT AND SPEED LIMITS

WARNING: Speed and weight limits are set for your safety. Please do not exceed the limits listed in the user manual.

Weight restrictions

E-bike maximum total weight: 150 kg

OPERATING RANGE

Please note that the e-bike has a 50 km range with a fully charged battery under ideal conditions. Following are some major factors that will affect the operating range of the bike.

Terrain: A smooth flat surface will increase your driving distance, whereas driving uphill or on rough or uneven terrain will reduce your distance significantly.

Weight: The weight of the user can affect the driving distance; a lighter user will have a farther range than a heavier user.

Ambient temperature: Please ride and store the bike within the recommended temperature range. This will increase the driving distance, battery life, and overall performance of your e-bike.

Maintenance: Correct battery charging and maintenance will prolong the battery life.

Speed and driving style: Maintaining a moderate speed will increase your distance; while travelling at high speeds for extended periods, frequent starts, stops, idling, along with frequent acceleration and deceleration will reduce your overall distance.

BATTERY INFORMATION AND SPECIFICATIONS

This section is intended to provide you with basic information about your battery and charger. Please read this section carefully to ensure your safety. For user safety and to prolong the life of your battery, as well as to improve battery performance, follow the instructions as stated.

Lock/Unlock Battery

You can lock the battery to the E-Bike by inserting the provided key and turning it clockwise.

If you need to unlock the battery to remove it from the E-Bike, insert the key and turn it anticlockwise.

It is recommended to always lock the battery during use.

When the battery is removed, you can hold down the indicator button on the battery to display an estimate of the remaining battery power.





Battery specifications

48 V Battery
Battery: Rechargeable Li-ion battery pack
Model: ZLXAT13S2P010
Charging time: 5 hours
Voltage: 48 Volt
Battery cells: 26 cells
Initial capacity: 10 Ah
Operating temperature: -20 to +60 °C
Charging temperature: 10 - 45 °C
Storage time: 2 months
Storage temperature: 15 - 27 °C
Storage humidity: 50 (+/- 25) %

The charger and battery supplied must only be used together and are not suitable for other equipment.

Battery storage

Do not charge the battery if the ambient temperature is below 10 °C. The battery needs to be placed in a warmer environment before being charged.

Store the battery inside in a dry place and correct temperature.

Do not store the battery in direct sunlight or in a car. High temperatures can damage the battery and decrease its lifetime.

Charging the battery

Step 1: Check that the charging port is clean and dry.

Step 2: Connect the charger to the bike's charging port.

Step 3: Connect the charger to the mains power.

Step 4: The charger indicator light should now turn red to show that the bike is charging.

The bike is fully charged when the charger indicator light turns green. The charger automatically stops charging when the charging light turns green.

Step 5: Disconnect the charger from the mains power. Disconnect the charger from the bike.

Note: If the charging indicator light does not turn red when the bike is connected for charging, then check that all plugs are properly connected, or check if the battery is already fully charged.

Note: The battery can also be removed from the bike for charging. Follow the same steps as above.

Safety tips for charging

Charge the battery fully before using it for the first time.

To extend the battery life, charge the battery at least every 2 months, and not more than two days after usage. Charge it within the correct temperature range.

Do not charge the battery longer than necessary. Turn off the charger when the battery is fully charged.

Do not store the battery without charging it. Charge the battery at least every 2 months.

Only use the supplied charger to charge the battery.

Do not use the charger if the charger or the charger cable is damaged. Contact support for a replacement.

Charger specifications

Standard charger 48 V
Model number: DPLC110V55Y
Input: 110 - 240 V, 2 A, 50/60 Hz
Output: 54.6.0V --- 2.0 A

INSPECTION, MAINTENANCE, AND STORAGE

Your e-bike requires routine inspection and maintenance. This chapter describes maintenance steps and important operating tips. Before you perform the following operations, ensure the power and charging cable is disconnected.

The bicycle (e.g. non-electrical) parts of the e-bike are standard components that can be obtained from your local bike shop. Ensure that replacement parts are genuine parts. Contact customer support if in doubt.

Use of non-genuine or non-compatible parts, or modification of the bicycle outside its specifications is considered tampering. Tampering may result in increased risks to the user, and the user bears responsibility for any resulting issues.

Inspecting your e-bike

Routinely check the frame and tyres of the e-bike for damage or excessive wear and for correct tyre pressure, check all bolts and screws and tighten them if needed.

Check that the handlebar screws are secure. Check that the handlebar cannot be moved up and down.

Check the side of the front and rear wheels for correct tyre pressure. See markings on tyres for correct tyre pressure.

The rims are subject to wear, which must be checked to ensure safety.

Check the brake pads for wear. If they are worn (approx. 1 mm left), replace the brake pads immediately.

See service folder for more information.

See the photo below, where screws must be checked and secured after each ride.



Cleaning your e-bike

Disconnect the charger and turn your e-bike off. Remove the battery.

Use a moist cloth to clean the e-bike. Do not use oil on the brakes.

Clean the brakes using a cloth dipped in isopropyl alcohol.

Do not use a high-pressure cleaner. Cleaning under running water is not recommended.

Do not spray water on the electrical components.

After cleaning, make sure to test the brakes before using the e-bike again.

Chain maintenance

Clean and lubricate the chain and chainrings regularly to extend their lifetime. Clean no less than once a month with daily use, more in poor conditions or if the chain becomes noticeably dirty.

Regularly clean the chain with a suitable chain cleaner.

Clean the chainrings using a neutral cleaning agent.

Use suitable lubrication on the chain and chainrings.

Storing your e-bike

If the ambient temperature of the storage location is below 10 °C, please do not charge.

Bring the battery into a warmer environment before charging. Check under the section "Battery information and specifications" for more details.

To prevent dust from getting into your e-bike and battery, try wrapping or sealing it with its original packaging materials.


Store your e-bike indoors. If the bike is wet, dry it before storage.

Store your battery indoors in a dry place and suitable temperature range.

Do not store the battery in direct sunlight or in a car. High temperatures can cause damage and decrease the life of the battery.

Adjusting the rear derailleur


Step 1:

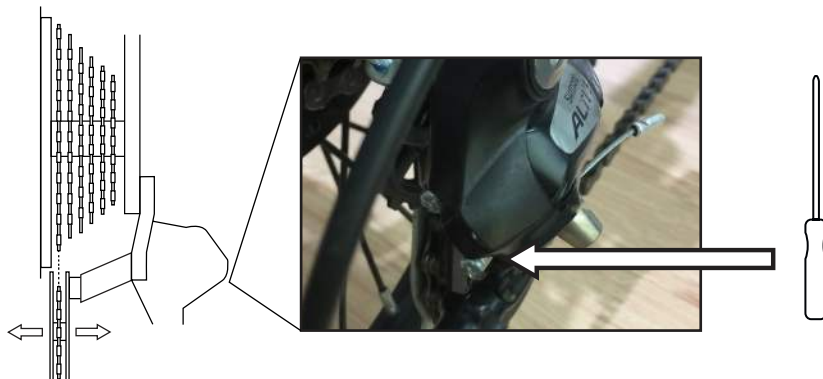

When lifting the rear of the bike and turning the pedals by hand, use the gear change to select the lowest gear.

Use a suitable screwdriver to turn the screw marked “L” (low gear) to adjust the rear derailleur until it is vertically aligned below the lowest gear. See the photo above.


Step 2:

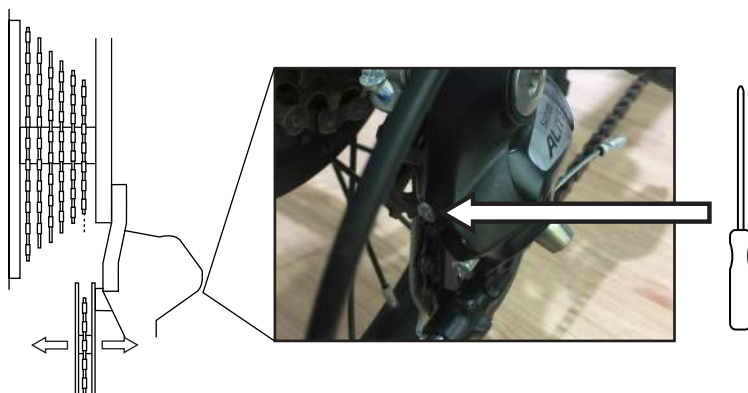

When lifting the rear of the bike and turning the pedals by hand, use the gear change to select the highest gear.

Use a suitable screwdriver to turn the screw marked “H” (high gear) to adjust the rear derailleur until it is vertically aligned below the highest gear. See the photo above.

Step 3:

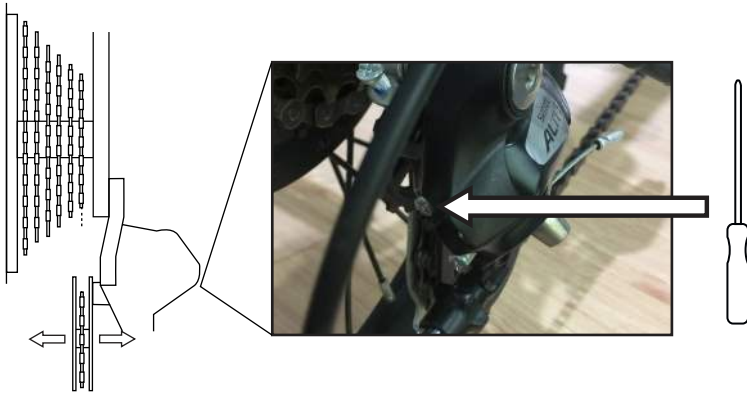

When lifting the rear of the bike and turning the pedals by hand, use the gear change to change the highest to the lowest gear one at a time. If the derailleur is adjusted correctly, the gears should shift quickly without any grinding noise.

If there are still problems after you adjust the rear derailleur, you can fine-tune it.

Rotate the adjuster (C) clockwise if there is a problem going from the lowest to the highest gear.

Rotate the adjuster (C) counter-clockwise if there is a problem going from the highest to the lowest gear.

Turn the adjuster about a quarter turn at a time and then change the gears to see if the problem is fixed. Repeat step 3 if the problem persists.


Mechanical brakes

The brake pads are worn over time. Adjustments are needed as the brake pads wear down.

If the brakes are too tight or loose, loosen the bolt that holds the brake cable in position.


To tighten the cable, decrease the length of the brake cable.

To loosen the cable, increase the length of the brake cable.

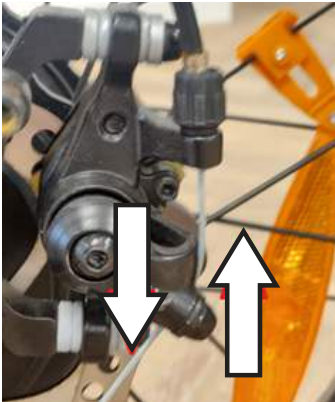


Fine-tuning the brake cable tension

To increase the cable tension, turn counter-clockwise.

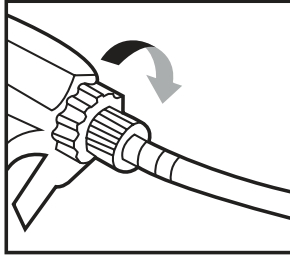

To reduce the cable tension, turn clockwise.

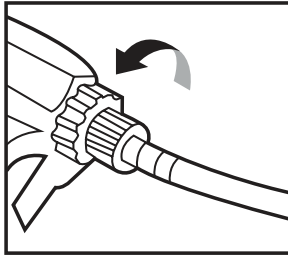

Noise from brakes

- The brake disc needs cleaning.
- You need to clean or sand the brake pads to remove impurities.
- The brake pads are worn and must be replaced.

The brakes are not working

- The brake cable needs adjustment. Adjust the length of the brake cable.
- The brake pads need adjustment. Adjust the position of the brake pads.
- The brake pads are worn and must be replaced.

Inspecting the trueness of the wheels

Over the lifetime of the bike, the wheels may begin to run out of true.

To check the trueness of a wheel, lift the e-bike and spin the wheel. If the wheel wobbles from side to side, then the wheel is out of true and will need repairing.

Special tools are required for repair. We recommend that the wheels be trued by a qualified repair technician. Contact your local retailer for more information on wheel repairs.

Inspecting the wheel bearings

Over the lifetime of the bike, the wheel bearings may become worn and will need servicing. To check, grab the tyre of either the front or rear wheel while holding the bike securely. Vigorously move the tyre from side to side. If the wheel moves at the wheel hub (the centre of the wheel), the bearing may be worn.

Special tools are required for repair. We recommend that the bearings be replaced by a qualified repair technician. Contact your local retailer for more information on wheel repairs.


Removing a wheel

Release the wheel bolts on each side of the wheel.

Note: Pay attention to the position of the washers when you remove them.

Mount the wheel and washers in the same order and orientation as you remove them.

Changing an inner tube

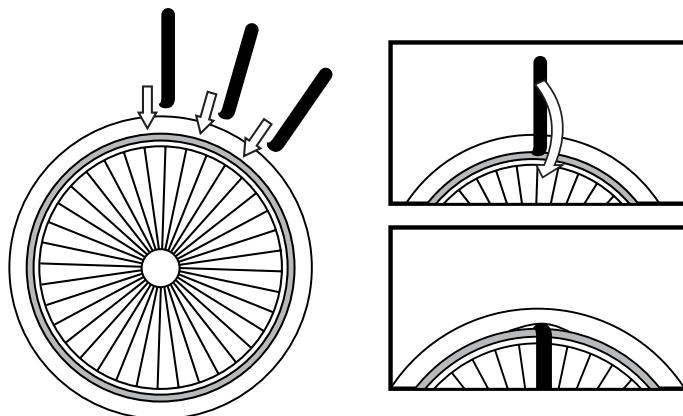

If you have a puncture, you will need to remove and patch or replace the inner tube.

NOTE: A set of tyre levers is needed to remove the inner tube. This is not included in the box.

Remove the dust cap from the tube valve. Deflate the tyre fully.

Push both sides of the tyre towards the centre, away from the rim, to loosen the tyre. Insert a tyre lever anywhere between the tyre and the rim but not close to the tube valve. Insert the second tyre lever close to the first one and press it down on the tyre lever. Continue this process all around until you can remove the tyre.

After the tyre is removed, carefully remove the inner tube, starting with the valve. Check the inner surface of the tyre for signs of damage or foreign matter.

After the tube has been repaired, partially inflate the inner tube using a bicycle pump. Carefully feed the inner tube into the tyre, starting with the valve. The valve must be aligned with the hole in the rim.

Replace the tyre in the rim, one small section at a time. For the last part, use the tyre levers to refit the last section.

Replacing the brake pads

See our webpage on how to replace brake pads:
www.vayabike.com



E-bike specifications

Net weight: 26,8 kg

Max load: 150 kg

Wheel size: 20 x 4 inch

Max compatible wheel size: 20 x 4 inch

Protection rating: IP54

Number of bike gears: 8

Number of assist mode gears: 5

Max pedal assist speed: 0 - 25 km/h

Operating range: Up to 50 km

RECOMMENDED TORQUES

PART	TORQUE (NM)
<i>Front wheel bolt</i>	28 - 32 Nm
<i>Rear wheel bolt</i>	30 - 35 Nm
<i>Handlebar screws</i>	M4: 5-8 Nm, M5: 8-10 Nm, M6: 12-14 Nm, M8: 20 Nm
<i>Brake cable bolt</i>	20 Nm
<i>Brake mounting bolt</i>	12 - 15 Nm
<i>Crank</i>	35 - 40 Nm
<i>Folding handle</i>	6 - 8 Nm
<i>Flange mounting screw</i>	3 - 5 Nm
<i>Rear derailleur</i>	6 - 9 Nm
<i>Sprocket holder screw</i>	35 - 40 Nm
<i>Gear change holder screw M5</i>	5 - 7 Nm
<i>Brake disc screw M5</i>	20 - 22 Nm
<i>Brake cable bolt</i>	20 Nm
<i>Support base</i>	10 - 12 Nm
<i>Battery connecting screw</i>	5 - 7 Nm
<i>Handbrake</i>	5 - 8 Nm
<i>Front wheel quick release</i>	8-10 Nm

DISPLAY ERROR MESSAGE

If an error occurs in the electrical system, the display will show an error code.

CODE	FAULT
21	Power failure
22	Hand throttle fault
23	Motor fault
24	Motor fault
25	Brake fault
30	Communication fault



Declaration of Conformity: (See provided document).
Products marked with this symbol comply with all applicable community regulations of the European Economic Area

DISPOSAL



Electrical and electronic equipment (EEE) contain materials, parts and substances, which can be dangerous to the environment and harmful to human health if waste of electrical and electronic equipment (WEEE) are not disposed of correctly. Electrical and electronic equipment, which are marked with the WEEE logo (as shown on the left), should not be thrown away with your household waste. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. The recycling of the materials will help to conserve natural resources. Contact your Local Authority Waste Disposal Department, as they will be able to provide details of the recycling options available in your area.

Imported by:
Vaya Nordic ApS, Pioner Alle 16D, 9200 Aalborg SV, Denmark.
Date of issue: 02/2023
Version: PO-1697



E-BIKE

In the event of a malfunction, please contact our customer service here:

ELCARE SWEDEN



Låsblecksgatan 7
58941 Linköping, SE



DK: +46855121787
SE: +46855121787
NO: +46855121787
FI: +35894245515



service.vaya@elcare.com

For further information and updates visit www.vayabike.com

Warning: Does not cover improper use of the product or failure to follow the warnings and operating instructions in this instruction manual. There is also limited coverage on wearing parts such as wheels, battery, brakes and grips. These parts are considered wear parts and can subsequently be ordered at www.vayabike.com